

UCB Keypad Programming Chart

Rev 3.0 – 6-12-14

Press and hold small push button on display board for **5 seconds** to enter program mode.

A	B 	C
D 	E	F 
G	H 	J
1 .,.:;	2 ABC	3 DEF
4 GHI	5 JKL	6 MNO
7 PQRS	8 TUV	9 WXYZ
*	0 B – Blank BS – Back Space EOL – End of Line	# ENTER