

UCB Keypad Programming Charts

Rev 3.0 – 6-12-14

Press and hold small push
button on harness board
for **5 seconds** to enter
program mode

A 	1 .,;:
B 	2 <i>ABC</i>
C 	3 <i>DEF</i>
D 	4 <i>GHI</i>
E	5 <i>JKL</i>
F	6 <i>MNO</i>
G	7 <i>PQRS</i>
H	8 <i>TUV</i>
J	9 <i>WXYZ</i>
K <i>ENTER</i>	10 <i>B – Blank</i> <i>BS –</i> <i>Backspace</i> <i>EOL – End</i> <i>of Line</i>